

CPC-3 Menu Hierarchy

The following displays the various menu options within the CPC-3. Additionally, the effects of various navigation buttons are explained based on their effect within that specific menu or submenu. The menus will be the same for Combustion Air and Draft applications, except for the shaded portion of this guide.

General Notes: Hold the SAVE SETTING button for 5 seconds in order to open the keypad from a locked setting. Generally, press the button corresponding to the menu you are in order to exit that menu. Press the enter button in order to exit a submenu and return to a menu.

- **SETUP** (Press INCREASE or DECREASE to move among choices)
 - **SET INSTALLATION**
 - Press SAVE SETTING to change between INDUCER/COMBUSTION INACTIVE and A/M XXX XXX XX%
 - **TEST RUN ON/OFF...**
 - Press ENTER to change between ON and OFF
 - **MANUAL SPEED ON/OFF...**
 - Press Enter to change between OFF and XX%, press INCREASE or DECREASE to change value)
 - Press SAVE SETTING to save setting

Combustion Only

- **SETUP** (Press INCREASE or DECREASE to move among choices)
 - **SET MODE**
 - Press enter to change between OPEN and SEALED
 - Press SAVE SETTING to save setting

- **SETUP, NON-MENU** (In order to access these features the SETUP button must be pressed beforehand)
 - **SET POINT**
 - Press INCREASE or DECREASE to change values
 - Press SAVE SETTING to save setting
 - **PRE-PURGE** (Press ENTER to move between Minutes and Seconds)
 - M(inutes)
 - Press INCREASE or DECREASE to change values, press SAVE SETTING to save setting
 - S(econds)
 - Press INCREASE or DECREASE to change values, press SAVE SETTING to save setting
 - **POST PURGE** (Press ENTER to move between Minutes and Seconds)
 - M(inutes)
 - Press INCREASE or DECREASE to change values, press SAVE SETTING to save setting
 - S(econds)
 - Press INCREASE or DECREASE to change values, press SAVE SETTING to save setting
 - **AUTO/MANUAL**
 - A/M (TOP OR 2ND TOP LINE)
 - Press SAVE SETTING to save setting

- **OPTIONS** (Press INCREASE or DECREASE to move among choices)
 - **RESET DRIVES**
 - Press SAVE SETTING to reset
 - **SET AT (IN WC/PASCALS)**
 - Press SAVE SETTING to change between IN WC and PASCALS
 - **FAULT HISTORY** (Press ENTER to select FAULT HISTORY, Press INCREASE or DECREASE to move among faults)
 - FAULT #1
 - FAULT #2
 - FAULT #3
 - FAULT #4
 - FAULT #5
 - CLEAR ALL FAULTS
 - Press SAVE SETTING to clear
 - **SET STAGES** (Press ENTER to select SET STAGES, Press INCREASE or DECREASE to move among stages)
 - ALL (ON/OFF)
 - (Press ENTER to bring up ON/OFF option, press SAVE SETTING to change between ON/OFF)
 - 1-16 (ON/OFF)
 - (Press SAVE SETTING to change between ON/OFF)

- **AUXILLARY DEVICE** (Press INCREASE or DECREASE to move among choices)
 - **ALARM BUZZER OFF/ON (Under AUX DEVICE SETUP)**
 - Press SAVE SETTING to change between ON/OFF
 - **AUX SENSOR SETUP** (Press ENTER TO select, press INCREASE or DECREASE to move among choices)
 - TYPE: NONE
 - Press SAVE SETTING to select
 - TYPE: COMB LOUVER
 - Press SAVE SETTING to select
 - TYPE: CO DETECTOR
 - Press SAVE SETTING to select
 - **AUX DEVICE SET UP** (Press ENTER TO select, press INCREASE or DECREASE to move among choices)
 - TYPE: NONE
 - Press SAVE SETTING to select
 - TYPE: COMB LOUVERS
 - Press SAVE SETTING to select

- **TIME/DATE** (Press ENTER to move among fields.)
 - **For all the below:** Press INCREASE or DECREASE to change values, press SAVE SETTING to save setting
 - MONTH
 - DAY
 - YEAR
 - HOUR
 - MINUTE
 - AM/PM

- **ENTER**
 - **LOCK OUT KEYPAD!**
 - Press SAVE SETTING to lock keypad